


PILOTIX VTX-5.8G 3W Operating Instructions

The antenna should be installed before using

Specifications

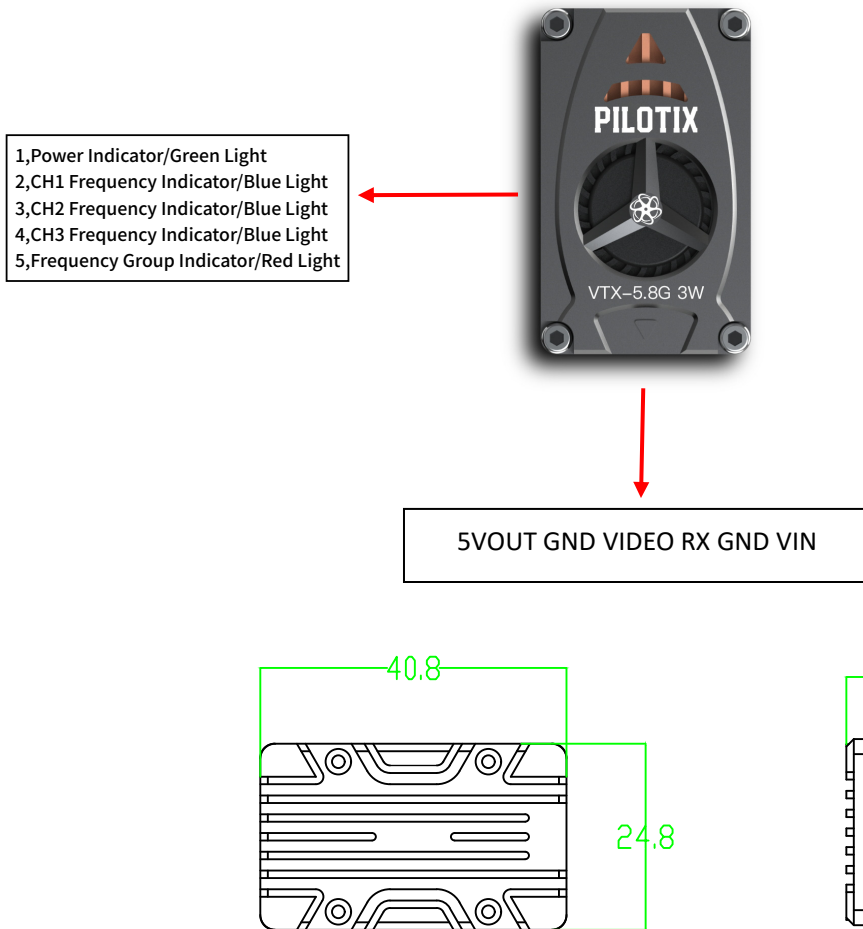

1. 48CH 5.8G frequency range: (A.B.E.F.R.L; 5362MHz-5945MHz);
2. Max power: 3W
3. Input voltage: DC 6V-28V
4. Antenna connector: MMCX
6. Heat-dissipating method: aluminum alloy heat sink&fan
7. Hole spacing: 20mm*20mm
8. Dimension: 40.8mm*24.8mm*13.3mm
9. Weight: 17.8g

Operating Instructions

Frequency Switching: Single click to switch.

(Blue light indicates the current frequency for CH1/CH2/CH3)

Frequency Group Switching: Press and hold for 2 seconds to enter the switching mode, then single click to switch. (The red light's blinking indicates the current frequency group)

Frequency Groups: A/B/E/F/R/L

Power Switching: Press and hold for 6 seconds to enter the switching mode, then single click to switch.

(The green light's blinking indicates the current power level)

Power Levels: 25mW/1.6W/2.0W/2.5W/MAX(3W)

(After setting, it will automatically save and exit after 8 seconds of inactivity)

Channel Table Indicator Instructions:

Indicator (Red)	Frequency					
CH3 CH2 CH1	A	B	E	F	R	L
○○○	5865	5733	5705	5740	5658	5362
○○●	5845	5752	5685	5760	5695	5399
○●○	5825	5771	5665	5780	5732	5436
○●●	5805	5790	5645	5800	5769	5473
●○○	5785	5809	5885	5820	5806	5510
●○●	5765	5828	5905	5840	5843	5547
●●○	5745	5847	5925	5860	5880	5584
●●●	5725	5866	5945	5880	5917	5621