


# ECLIPSE 002 USER MANUAL



# Connection

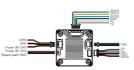

 Power Consumption: 12V@120mAh CVBS: Connect to analog VTX "CAMERA" port or "CVBS IN" port

Detector type	Uncooled Vanadium Oxide
Resolution	256x192
Wavelength Range	8~12µm
LENS	F1.0/4mm
FOV	50*(H)*37.2*(V)*62.3*(D)
Frame Rate	50 fps
Power consumption	<1.5w
Output	PAL
Supply Voltage	9V~24V
Temperature	-20°C~60°C
Interface	Analog Interface: CVBS
Latency	Average Latency 20ms
Image Quality	Allmage Enhancement

# **OSD Functions**

Note: The hardware needs to be version V2.0 and the software is version 240724-1 002SL v2 or higher.



The movement allows you to customize the OSD string of the video display through an external menu board.

The OSD board is divided into four directions: up, down, left, right and center.

### Operating Instructions:

- 1. Connect the menu board to the movement
- 2. Wait for the movement to power on the picture 3. Press the center button, the operation interface will pop up, the operation interface is divided into four lines, the first line and the second line is to provide a choice of
- characters, the third line is to delete the option, the fourth line is the current character. the black background is the current cursor position 4. Press up, down, left or right to move the cursor in the character line, and press center
- to select the character to be inserted into the current string. 5, move the cursor to DEL, press the center, you can delete the last character in the
- string, all clear the current string will become [NA], this time that there is no character 6. Move the cursor to the fourth line of the current character line, press the center key to exit the operation. This is the string if not empty, the lower left corner will have the current settings string

# Serial Communication Description



TX	Master transmit, 3.3V level, baud rate default 115200bp
RX	Master receive, 3.3V level, baud rate default 115200bps
GND	Reference Ground
GPI00	General Purpose IO, 3.3V level
GPIO1	General Purpose IO, 3.3V level
GPIO2	General Purpose IO. 3.3V level

#### 1 Description of Agreement

		-					
OxFF 1Dyte)	OxSA (10lyte)	version (10yte)	cmd (20yte)	sub_omd (1Dyte)	payload_len (4Dyte)	payload	cnc16 (2Byte)

### 1.1 Field Description

OvEE: constant value Ov6A: constant value

version: Protocol version (initial version 0) cmd: Command id

sub cmd: subcommand payload len: Payload data length navioad: Data content

crc16: Checksum value with header and payload

header (100yte)

### 1.2 Calibration Function

crc16\_code static uint16\_t crc16\_modbus(uint8\_t \*data, uint32\_t length)

uint8\_t i; uint16 t crc = 0xffff; // Initial value while(length--)

#### crc ^= \*data++; for (i = 0; i < 8; ++i) // crc ^= \*data; data++;

if (crc & 1) cro = (cro >> 1) ^ 0x4001: // 0x4001 = reverse 0x8005 crc = (crc >> 1);

return crc;

### 2. Command Definition

host-dev: The host computer sends to the device dev-host: The device sends to the host computer

### 2.1 Getting the Version

Directional	cmd	sub_omd	payload_len (Byte)	Instruction
host->dev	0	0	0	
dev->host	0	0	N	Returns the firmware version string

### 2.2 Image Adjustment

Directional	amd	sub_cmd	payload_len (Byte)	Instruction
hast->dev	1	0	1/0	1Dyte brightness value (0-100), no payload without setting only return the actual brightness value
dev->host	1	0	1	Returns the current brightness value
hast->dev	1	1	1/0	1Byte contrast value (0-100), no psyload not set only return the actual contrast value
dev->host	1	1	1	Returns the current contrast value

#### 2.3 Paeudo-Color

Directional	cmd	sub_cmd	payload_len (Byte)	Instruction
host->dev	2	0	1	Set the pseudo-color serial number, 0 is off nearth-color

# 2.4 Shutter Control

lirectional	cmd	sub_cmd	payload_len (Byte)	Instruction
ost->dev	3	0	1	Manual shutter calibration image
ost->dev	3	1	1	Disable automatic shutter calibration
ost->dev	3	2	1	Enable automatic shutter calibration

### 2.5 Hot Tracking

Directional	cmd	sub_cmd	payload_len (Byte)	Instruction
host->dev	4	0	1	Close Hot Tracking
host-adev	4	1	1	Onen Hot Tracking

# 3. Example of Command

Command Description	Command Data
Get version	FF 5A 00 00 00 00 00 00 00 00 C7 57
Set the contrast to 80%	FF 5A 00 01 00 01 01 00 00 00 50 EB 73
Set the contrast to 50%	FF 5A 00 01 00 01 01 00 00 00 32 6A 9A
Set the brightness to 80%	FF 5A 00 01 00 00 01 00 00 00 50 EA A2
Set the brightness to 50%	FF 5A 00 01 00 00 01 00 00 00 32 6B 4B
Set pseudo color 5	FF 5A 00 02 00 00 01 00 00 00 05 6A 88
Set pseudo color 0	FF 5A 00 02 00 00 01 00 00 00 00 AA 8B
Shutter Calibration	FF 5A 00 03 00 00 00 00 00 00 F4 57
Disable Auto Shutter	FF 5A 00 03 00 01 00 00 00 00 C9 97
Enable Auto Shutter	FF 5A 00 03 00 02 00 00 00 00 8D 97

# Dimensions









CADDXFPV Support email: support@caddxfpv.com

This content is subject to change Download the latest version from https://www.caddxfpv.com